

Bodega Picnic Table For Fastener Pack (FP-BOT-CU-01)

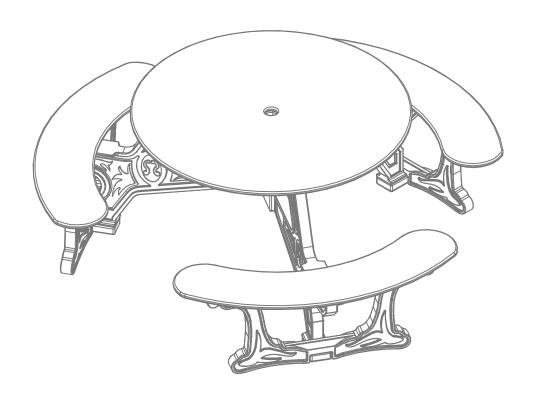

Congratulations!!

You have just purchased the finest recycled plastic picnic table available. Enjoy!!!

Before assembly, please make sure all components are included.

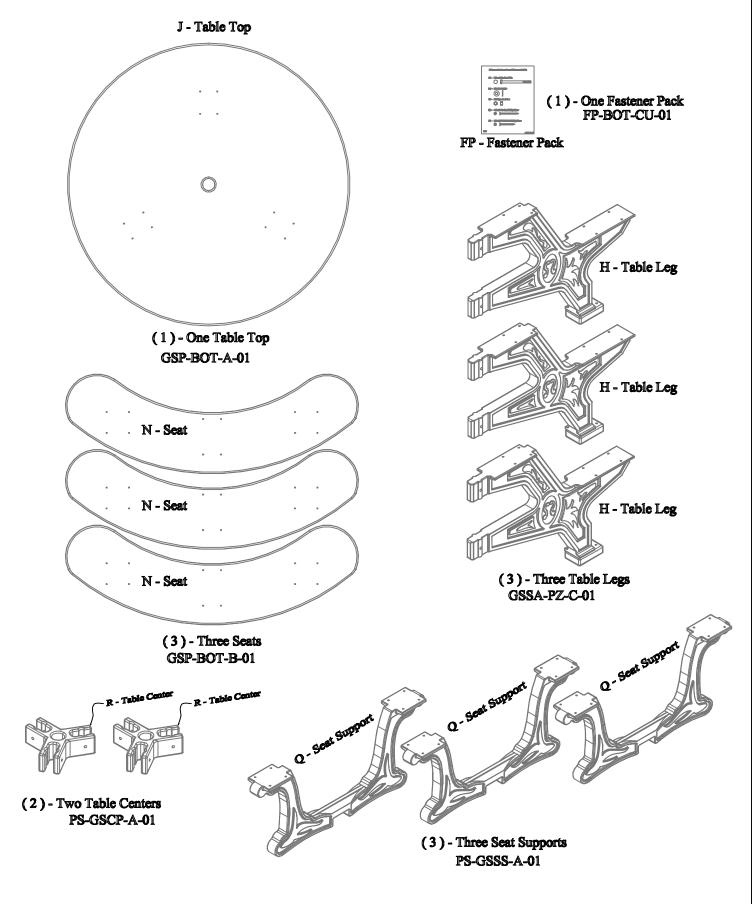


Before assembly, please make sure all fasteners are included.		
6	0	3/8" x 4 1/4" Hex Head Bolt
12	0	3/8" Flat Washer
6	8	3/8" Nylon Lock Nut
6	0	#12 x 2 1/2" Flat Head Phillips Screw
24	0	#12 x 1-1/4" Flat Head Phillips Screw
24	-	#12 x 1" Pan Head Phillips Screw


Also needed for this assembly will be the following materials:

- 1 #3 Phillips Drive Bit
- 2 9/16" Socket Wrench

IMPORTANT NOTICE:

- DO NOT OVER-TIGHTEN SCREWS.
- USE A DRILL WITH ADJUSTABLE TORQUE FOR BEST RESULTS.
- OVER-TIGHTENING WILL RESULT IN STRIPPING OUT THE PILOT HOLE, AND SCREW WILL "SINK" INTO THE PLASTIC WHICH MAY CAUSE A STRESS FRACTURE OR THE SCREW MAY POKE THROUGH THE TOP OR SEAT.

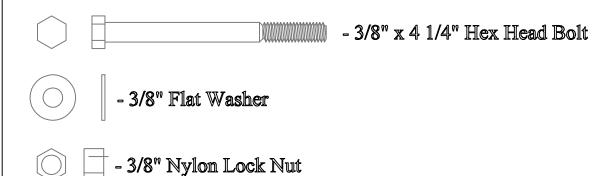


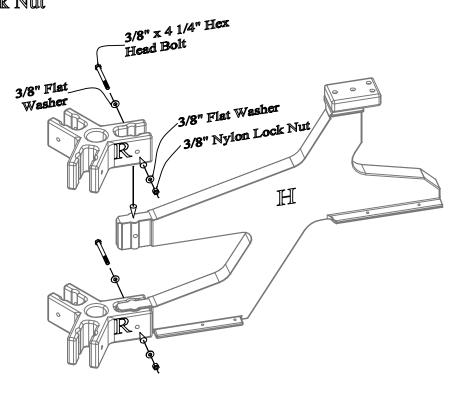


Step #1:

Slide (1) One Table Center on to each end of the Table Leg as shown above. Use (1) One 3/8" x 4 1/4" Hex Head Bolt and (1) One 3/8" Flat Washer along with (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to secure.

Do not tighten bolts completely. This will be done in a later step.

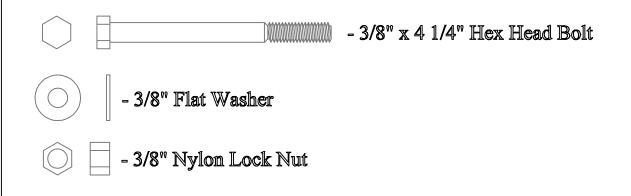


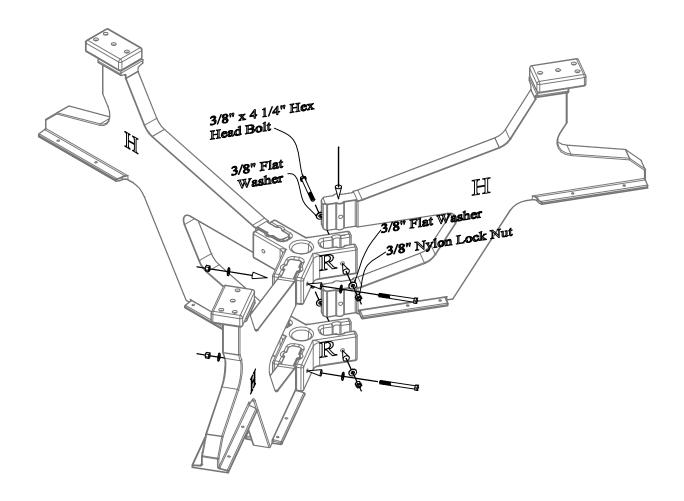


Step #2:

Slide the remaining Table Legs in to the Table Centers. Use (1) One 3/8" x 4 1/4" Hex Head Bolt and (1) One 3/8" Flat Washer along with (1) One 3/8" Flat Washer and (1) One 3/8" Nylon Lock Nut per hole to secure.

Do not tighten bolts completely. This will be done in a later step.



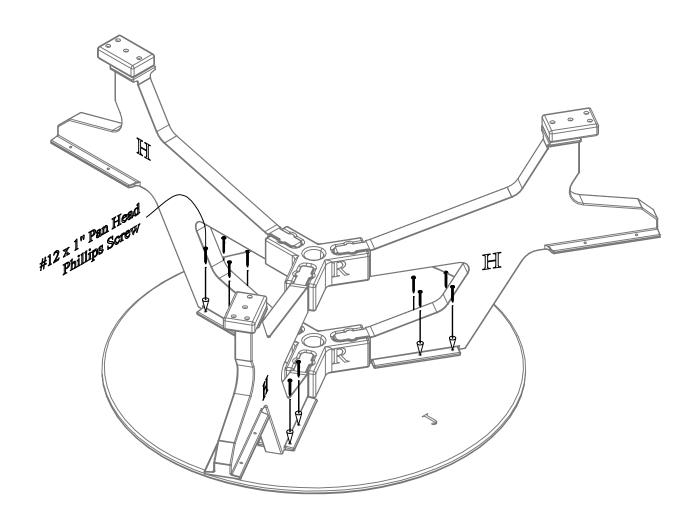


Step #3:

While the Table Top is upside down, place the leg assembly onto the Table Top as shown above. Align the pre-drilled holes in the Table Legs with the pilot holes in the Table Top. Use (1) One #12 x 1" Pan Head Screw per hole to secure.

Be sure to tighten all screws after completing this step.




-#12 x 2 1/2" Flat Head Phillips Screw

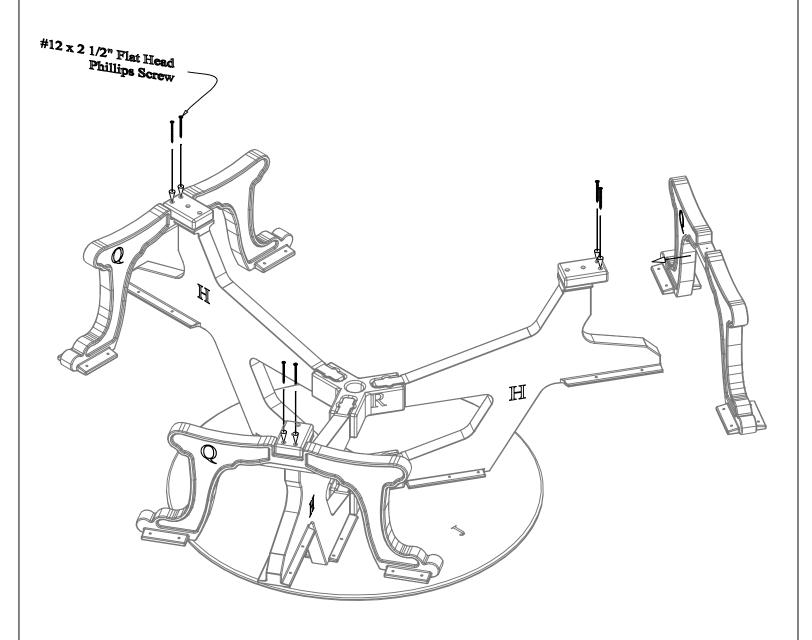


Step #4:

While the table is upside down, align the pre-drilled holes in the Table Leg to the pilot holes in the Seat Support as shown above. Use (1) One #12 \times 2 1/2" Flat Head Screw per hole to secure.

Do not tighten screws completely. This will be done in a later step.




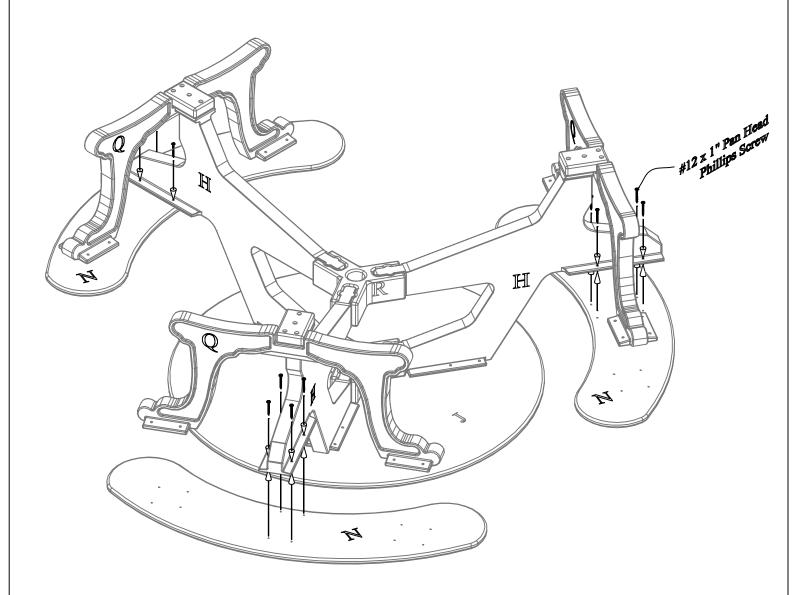


Step #5:

While the table is upside down, align the pre-drilled holes in the Seat to the pilot holes in the Seat Support and the Table Leg as shown above. Use (1) One #12 x 1" Pan Head Screw per hole to secure the seat (part N) to the leg (part H).

Do not tighten screws completely. This will be done in a later step.




- #12 x 1-1/4" Flat Head Phillips Screw

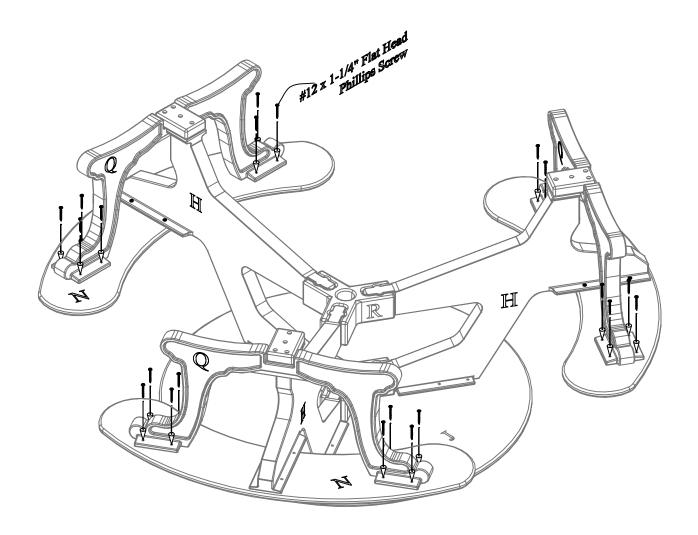

Step #6:

While the table is still upside down, align the pre-drilled holes in the Seat to the pilot holes in the Seat Support. Use (1) One #12 x 1-1/4" Flat Head Screw per hole to secure the seat (part N) to the seat support (part Q).

Be sure to tighten all loose screws after completing this step.

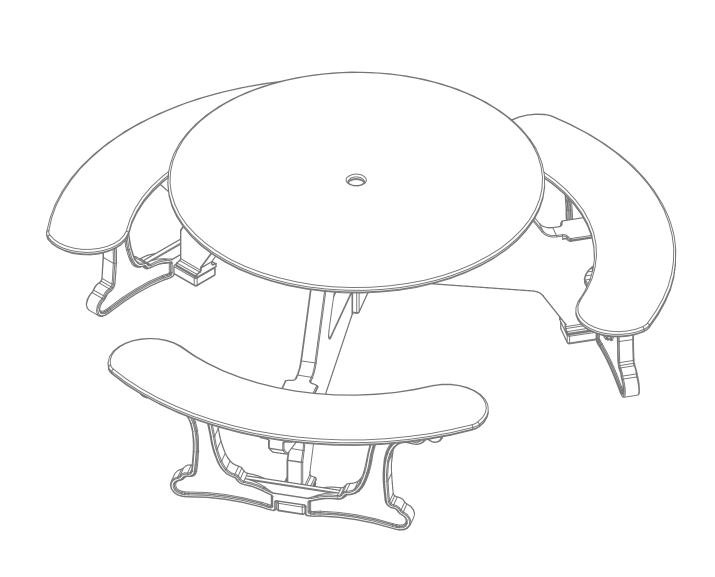

Step #7:

Turn the table over on to its legs, please use caution for the table weighs approximately 175 pounds.

DEAR VALUED CUSTOMER,

THANK YOU FOR PURCHASING THIS
PRODUCT. THIS PRODUCT IS
MANUFACTURED USING RECYCLED
MATERIALS AND MAY HAVE SLIGHT
COLOR VARIATIONS, OCCASIONAL
SPECKS OF COLOR OR IRREGULAR
SURFACE PATTERNS. THESE ARE
NORMAL CONDITIONS OF RECYCLED
PLASTICS AND MAKE EACH PIECE OF
FURNITURE UNIQUE. THESE
CHARACTERISTICS DO NOT AFFECT THE
STRENGTH, QUALITY OR PERFORMANCE
OF THE PRODUCT.

THANK YOU AGAIN FOR PURCHASING THIS PRODUCT AND HELPING OUR ENVIRONMENT.