


3T32I Indoor Receptacle

For Fastener Pack
(FP-3T32I-CU-00)

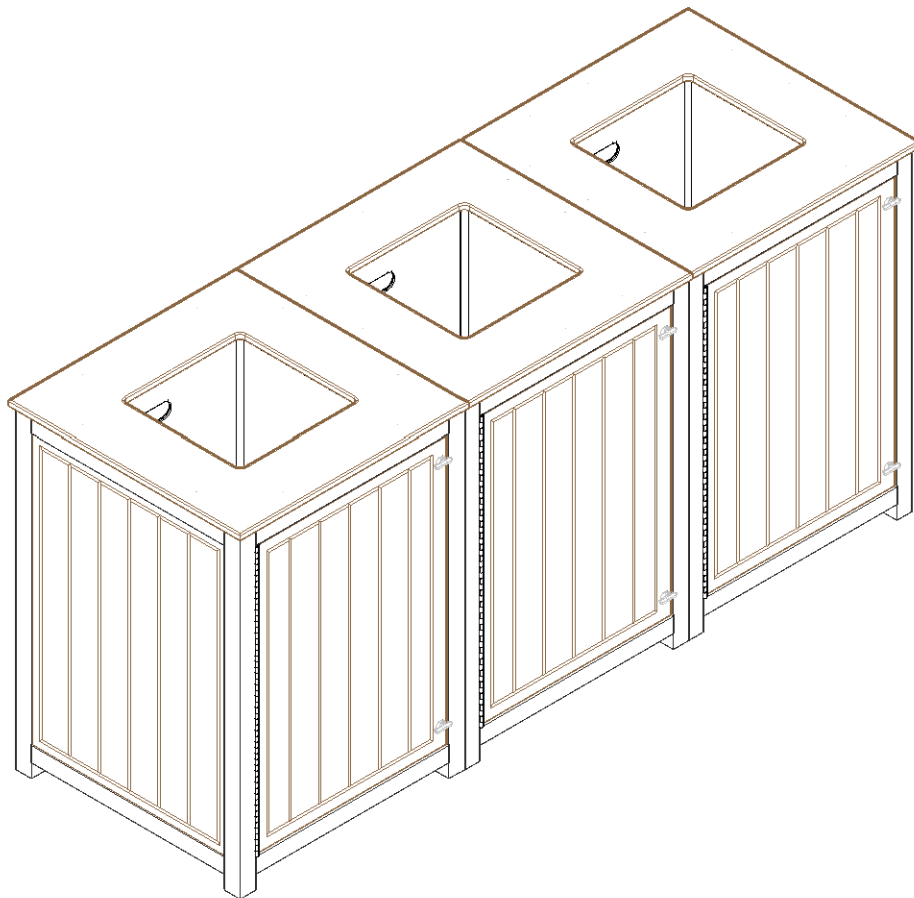

Congratulations !!
You have just purchased the finest recycled
plastic receptacle available. Enjoy !!!


Before assembly, please make sure all components are included.




(1) - One Fastener Pack
FP-3T32I-CU-00

FP - Fastener Pack


A - (1) One Left Indoor Receptacle
w/ 32 gal. Liner
SBA-2T32I-A

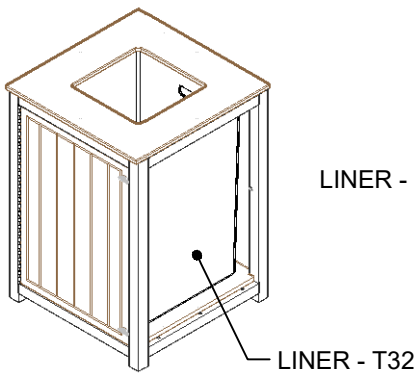


B - (1) One Center Indoor Receptacle
w/ 32 gal. Liner (2 Open Sides)
SBA-3T32I-A

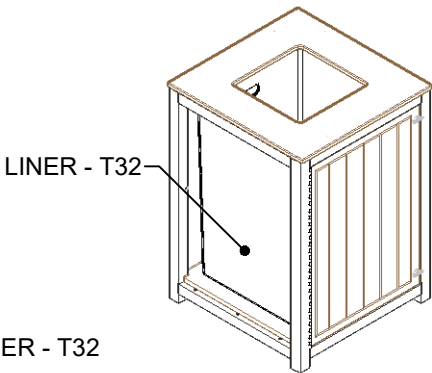


C - (1) One Right Indoor Receptacle
w/ 32 gal. Liner
SBA-2T32I-B

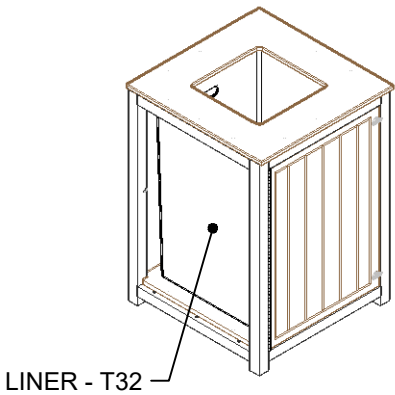

D - (4) Four Connecting Blocks
RP-2T32-H

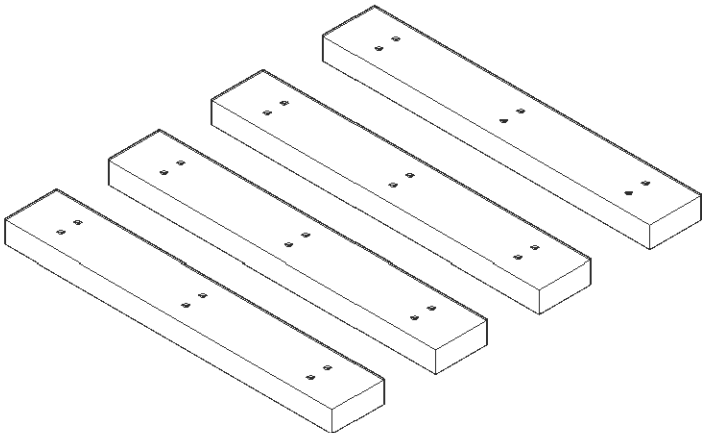

E - (2) Two Connecting Spacers
RP-2T32-S3

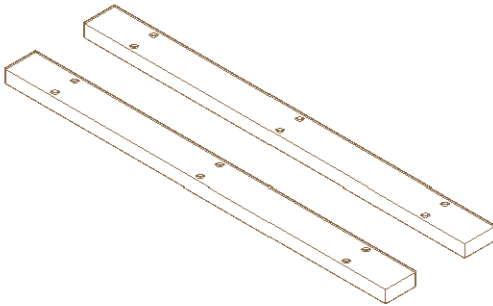

Before assembly, please make sure all fasteners are included.

24 - #12 x 2 1/2" Pan Head Phillips Screw




Also needed for this assembly will be the following materials:

1 - #3 Phillips Drive Bit


***IMPORTANT NOTICE*:**

- DO NOT OVER-TIGHTEN SCREWS.
- USE A DRILL WITH ADJUSTABLE TORQUE FOR BEST RESULTS.
- OVER-TIGHTENING WILL RESULT IN STRIPPING OUT THE PILOT HOLE, AND SCREW WILL "SINK" INTO THE PLASTIC WHICH MAY CAUSE A STRESS FRACTURE.

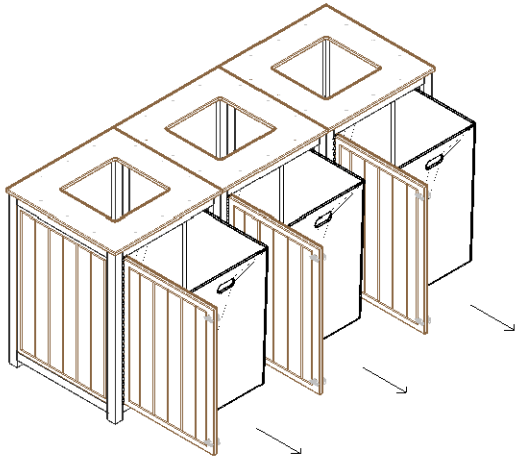


Step #1:


Take Receptacle "A", open the door and remove the 32 gallon liner. Set aside. Repeat for Receptacle "B" & "C".

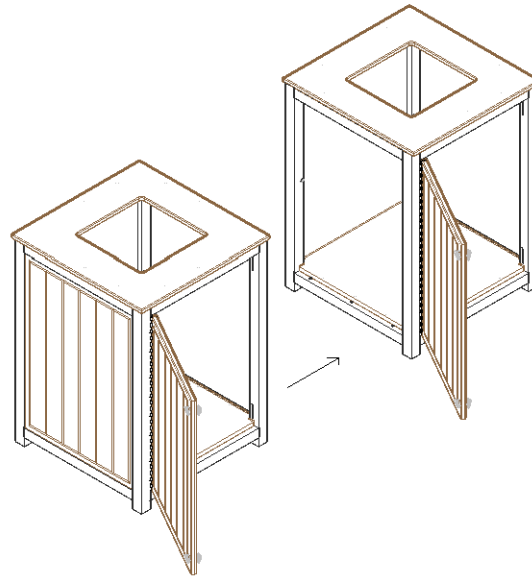

Step #2:


With the door openings on facing the same direction, Take Receptacle "A" and place it as close as possible to Receptacle "B" (the sides without panels facing each other, as shown).

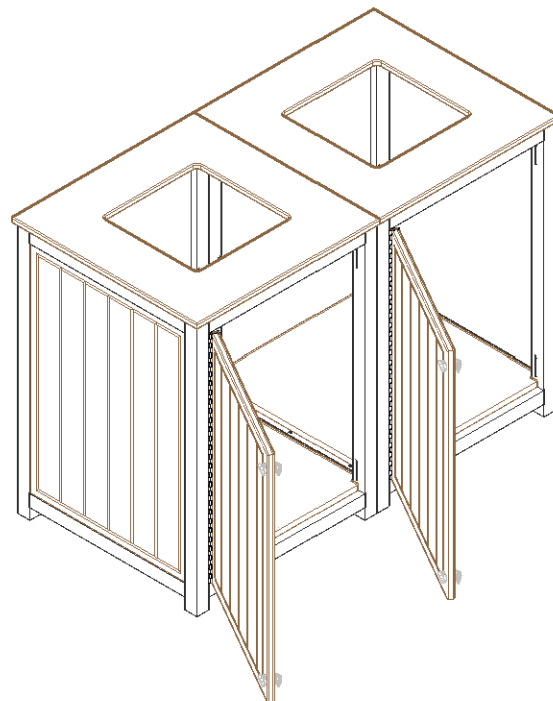

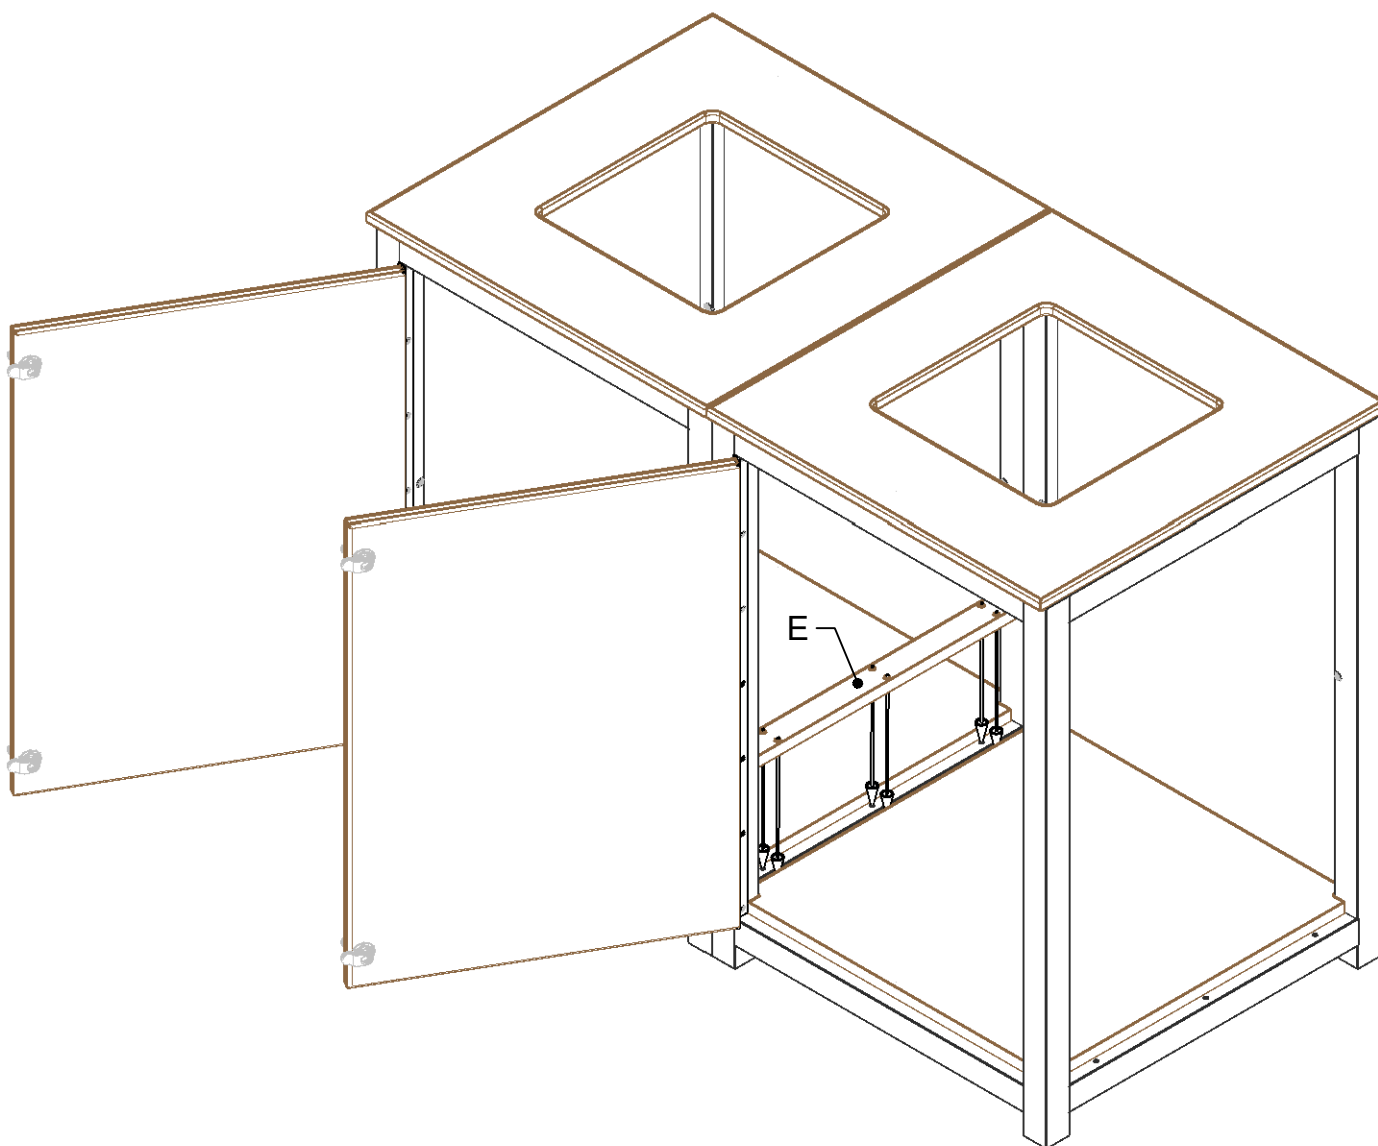

Step #3:


Align the pre-drilled holes in part "E" with the pilot holes at the base of Receptacle "A" and "B" as shown above.

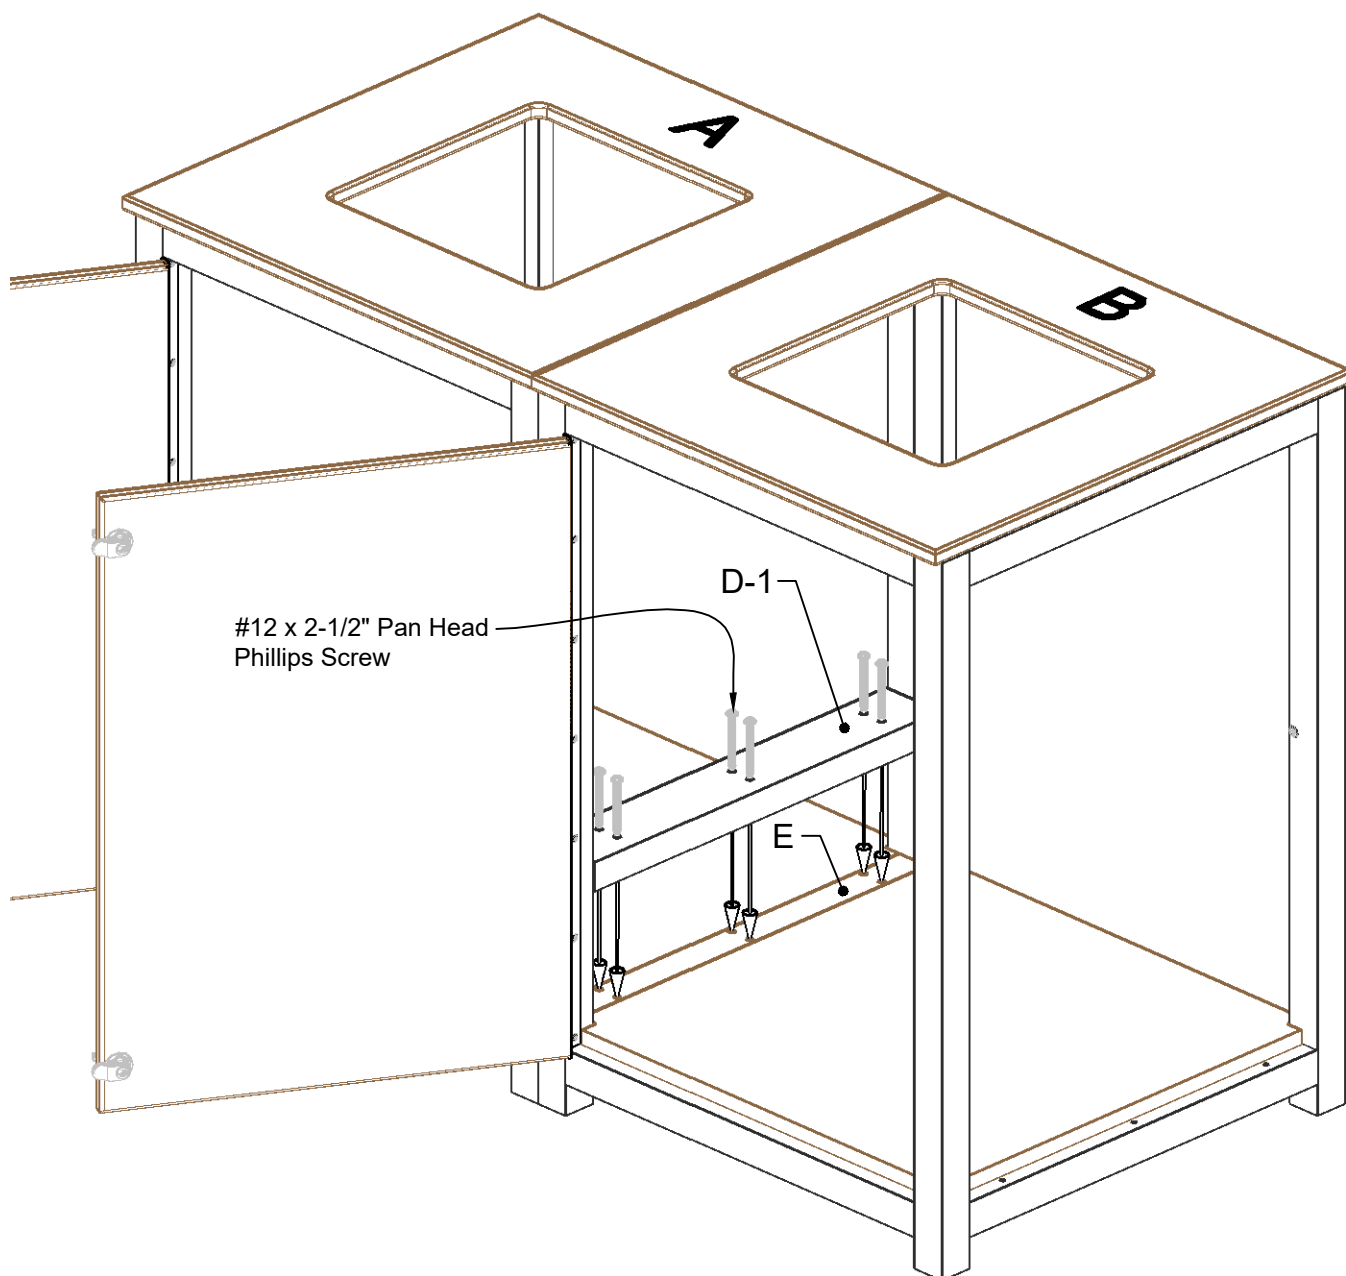

Step #4:

Align the pre-drilled holes in part "D-1" to part "E" and the pilot holes in the bottom of parts "A" & "B" as shown above. After the holes are properly aligned, fasten with (1) One #12 x 2-1/2" Pan Head Phillips Screw per hole.

Note: Do not tighten screws completely, this will be done at a later step.

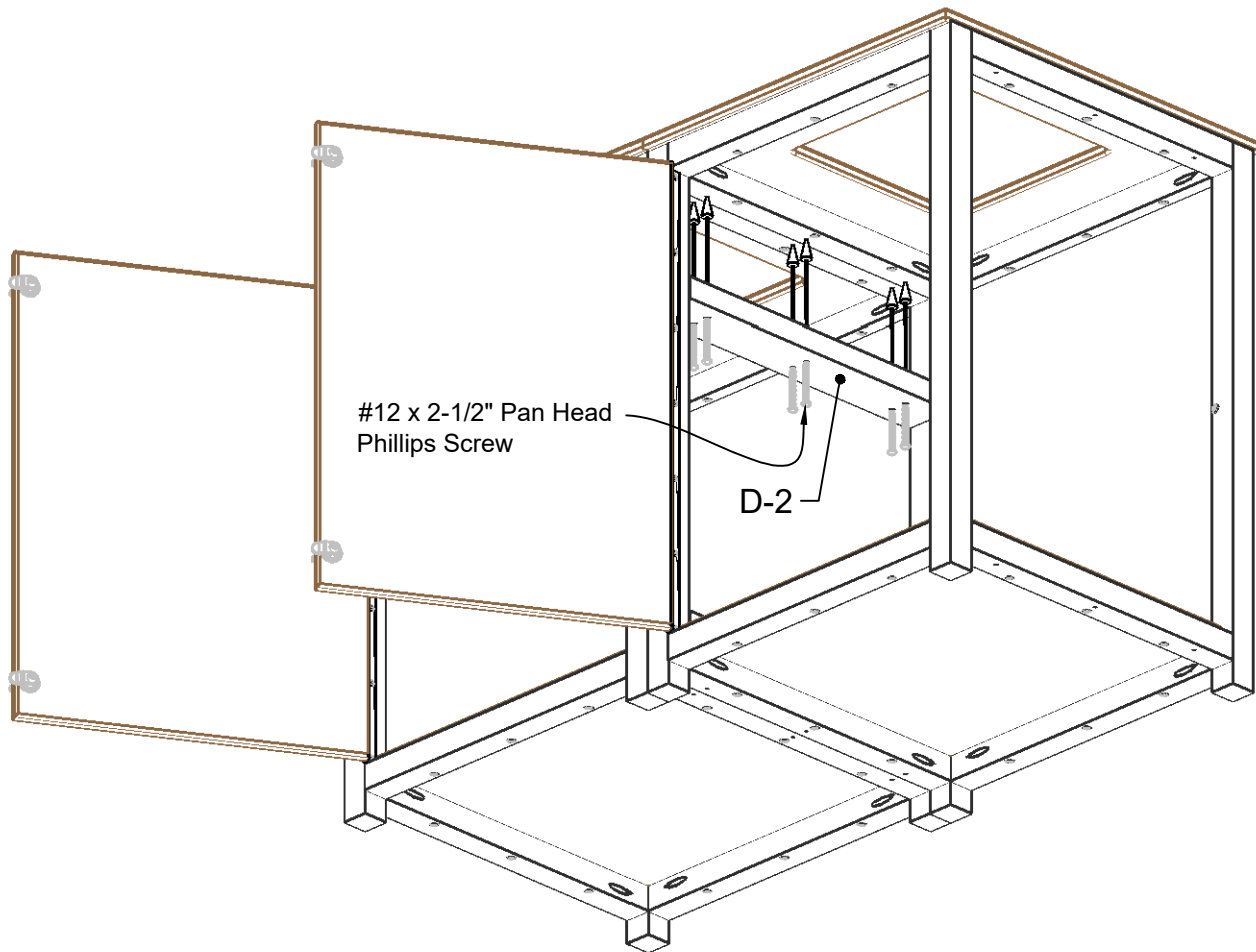

Step #5:





Take part "D-2" and line up the pre-drilled holes with the pilot holes inside Receptacles "A" and "B" as shown above. With the holes aligned, fasten (1) #12 x 2-1/2" Pan Head Phillips Screw per hole.

Note: Do not tighten screws completely, this will be done at a later step.


Step #6:

Take Receptacle "C", with the door opening facing in the same direction as Receptacles "A" & "B", and repeat step #2 - #5 for Receptacles "C" & "B" respectively.


Note: Be sure to tighten screws completely after this step.

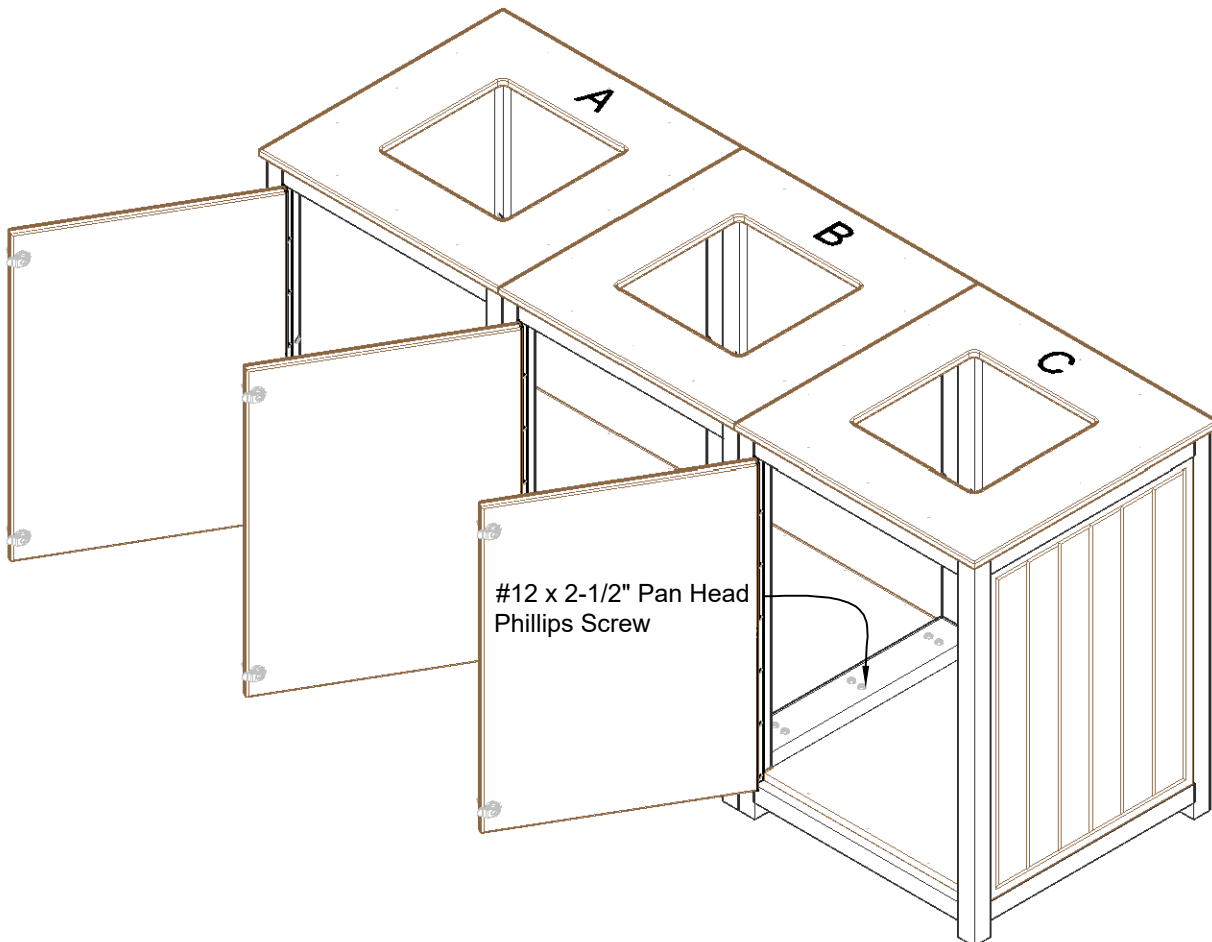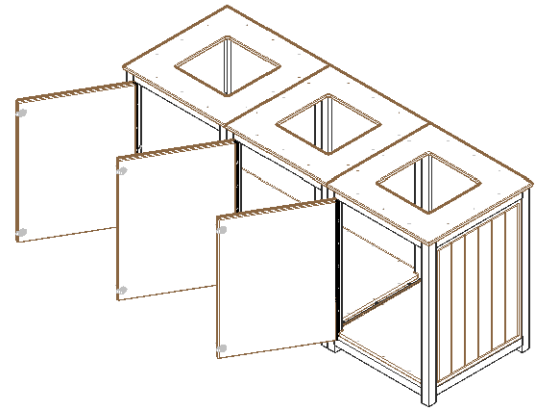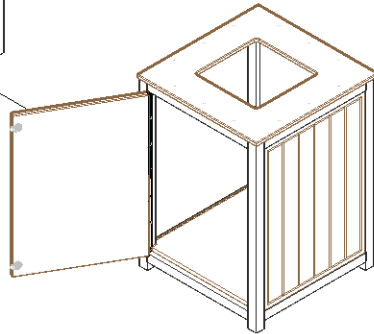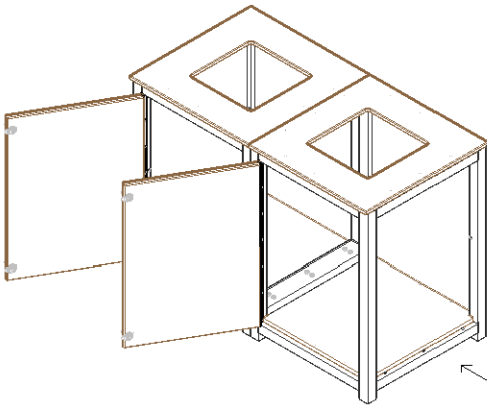

#12 x 2-1/2" Pan Head
Phillips Screw

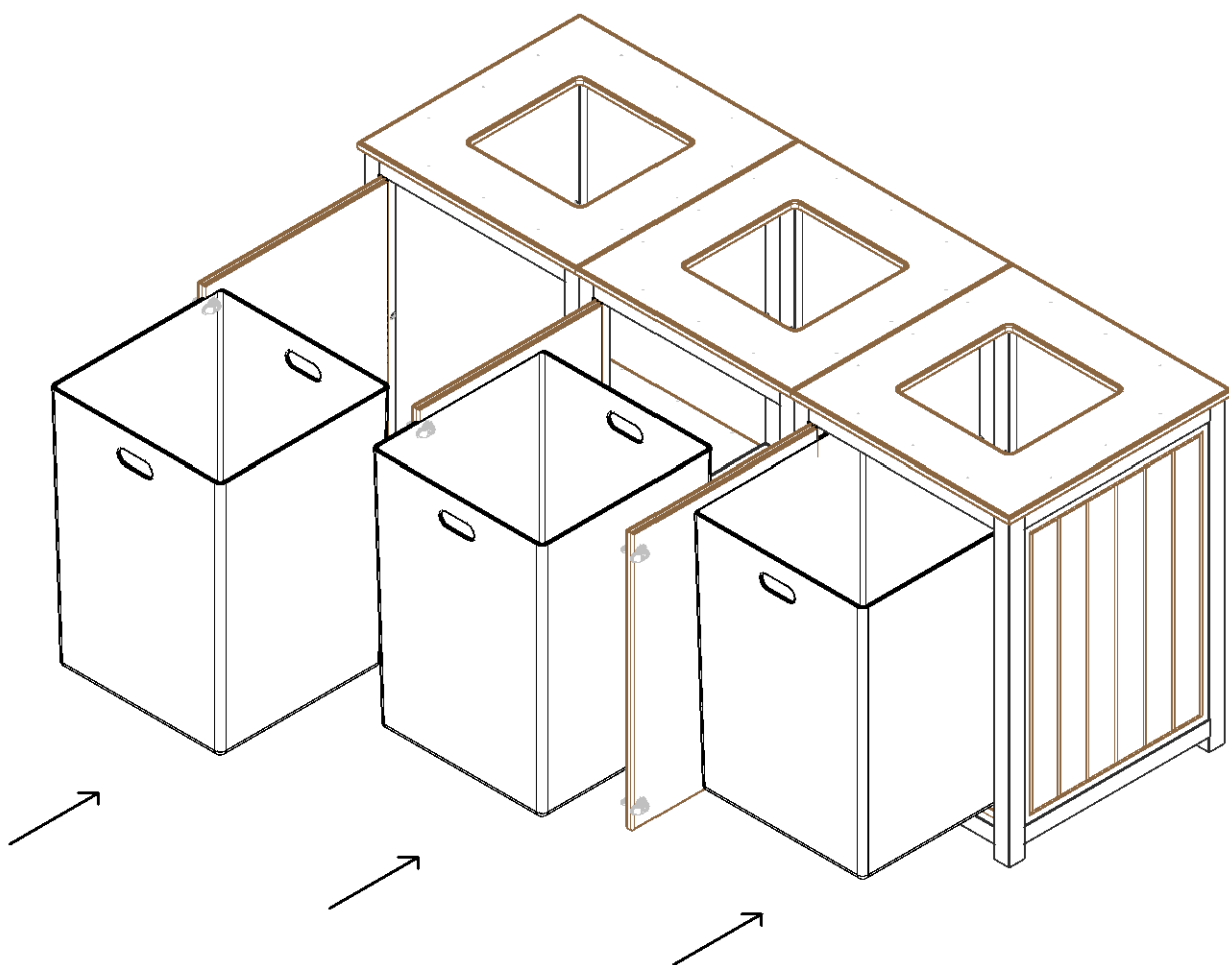

Step #7:
Replace the 32 gallon liner in each receptacle.

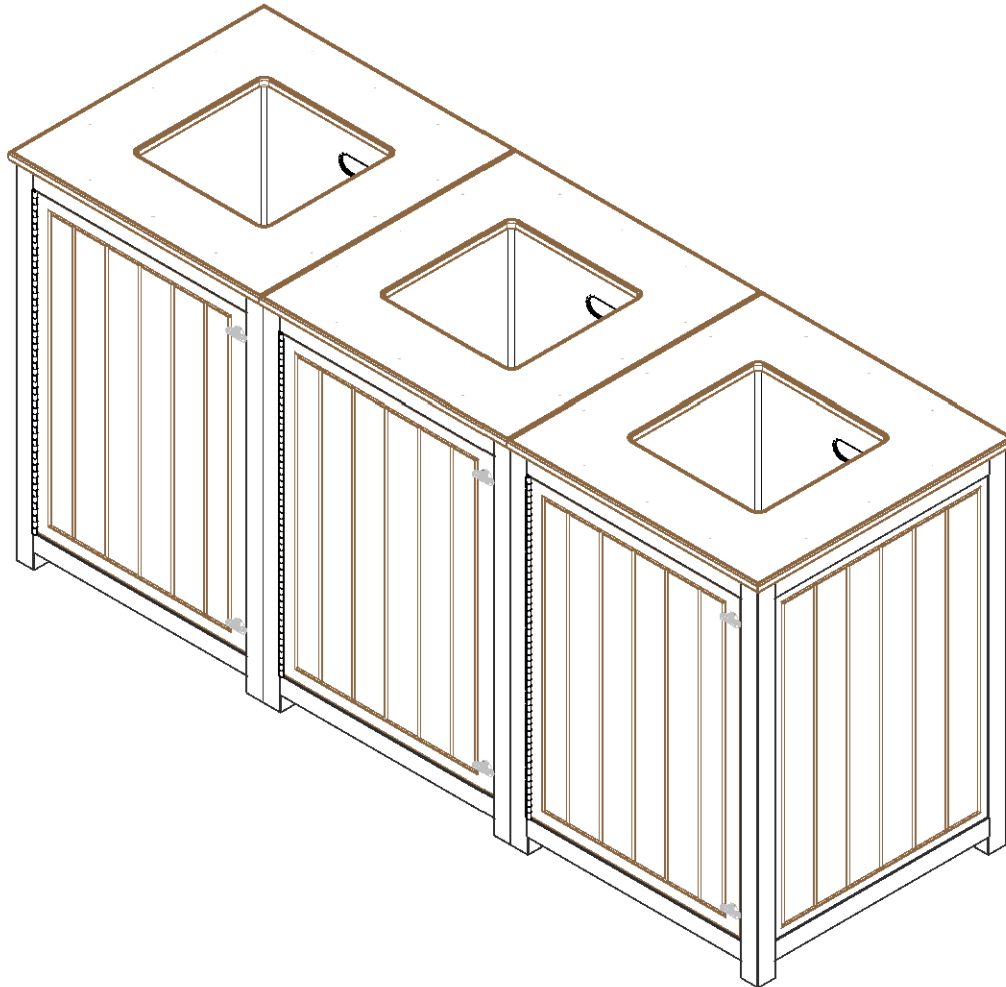

Step #8:

Close the doors and secure each latch. Your receptacle is now complete.

*Note: The receptacle weighs approximately 223 lbs., please use team lift when moving.

DEAR VALUED CUSTOMER,

THANK YOU FOR PURCHASING THIS PRODUCT. THIS PRODUCT IS MANUFACTURED USING RECYCLED MATERIALS AND MAY HAVE SLIGHT COLOR VARIATIONS, OCCASIONAL SPECKS OF COLOR OR IRREGULAR SURFACE PATTERNS. THESE ARE NORMAL CONDITIONS OF RECYCLED PLASTICS AND MAKE EACH PIECE OF FURNITURE UNIQUE. THESE CHARACTERISTICS DO NOT AFFECT THE STRENGTH, QUALITY OR PERFORMANCE OF THE PRODUCT.

THANK YOU AGAIN FOR PURCHASING THIS PRODUCT AND HELPING OUR ENVIRONMENT.